


FETCO® User's Guide and Operator Instructions

FETCO Extractor Touch Screen Models: CBS-2100XTS

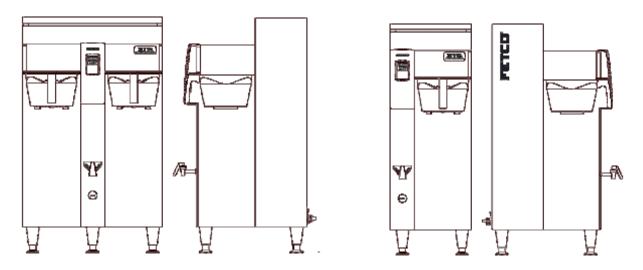

Two Part User Guide FETCO Extractor Touch Screen Models: CBS-2100XTS

Extractor Touch Screen Commercial Hot Beverage Equipment



Table of Contents-

Part A: Universal CBS-2100 XTS Operation Instructions

First Brew	.2 .3	How to calibrate the flow rate Error Codes	10 12
Service & Programming	.4	Operator Training	13
Programming menu layout	.5	-	

Part B: Installation and Service Guide for FETCO CBS-2131 & CBS-2132XTS Brewers

Table of Contents: Installation and Service Guide	Section—Reserved for qualified service technicians
Service Guide to a Successful Installation2	Parts diagrams8
Specifications and Requirements3	Wiring diagrams18
Specifications-Electrical and Output3	Set-Up Instructions: 3 Liter.& 1 Galon configurations22

Contact Information

FETCO®

Food Equipment Technologies Company 600 Rose Road

Lake Zurich • IL • 60047-0429 • USA

Internet: www.fetco.com

©2013-2016 Food Equipment Technologies Company



Phone: (800) 338-2699 (US & Canada)

(847) 719-3000 Fax: (847) 719-3001 Email: sales@fetco.com

techsupport@fetco.com PATENTS: WWW.fetco.com/patents

> P123 **REV:002**

March 2016

Instructions for brew operation-fast brew

Setup is simple

1-Connect unit to water and electrical utilities

See instructions

2-Turn unit "ON" to fill and heat

The "READY" icon will display "Ready To Brew" with factory set defaults

3-Add paper and ground coffee to brew basket

The Specialty Coffee Association of America® (SCAA) guidelines are 55grams per liter

4-Place appropriately sized, clean, empty and preheated dispenser under brewbasket.


5-Touch and briefly hold finger on screen as shown below to start brew


-Note: "READY" icon is satisfied


Factory setting total brew time is five minutes-thirty seconds. Brew time is four minutes with one and a half minute drip delay. Drip delay allows the brew basket to completely empty the brewed coffee

Brew operation is simple. The intuitive touch screen-STARTS THE BREW


CBS-2131XTS single side brewer is displayed. Screen shown approximately the same size as on equipment

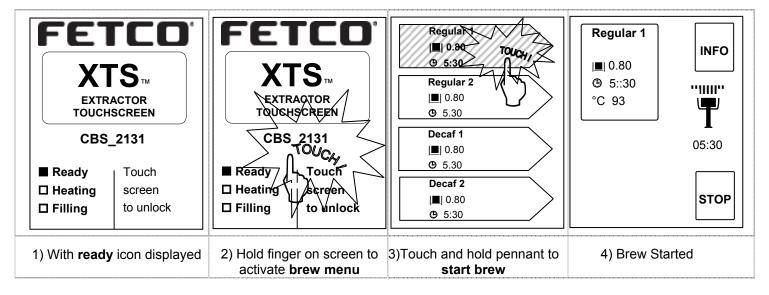

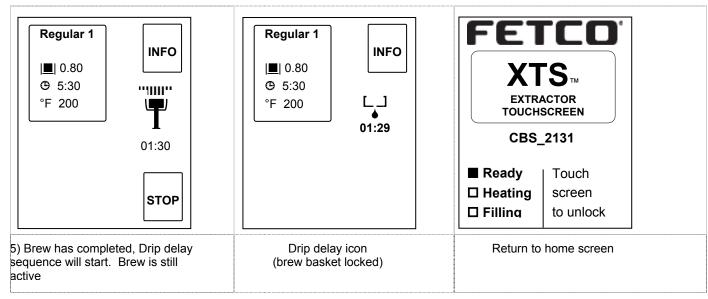

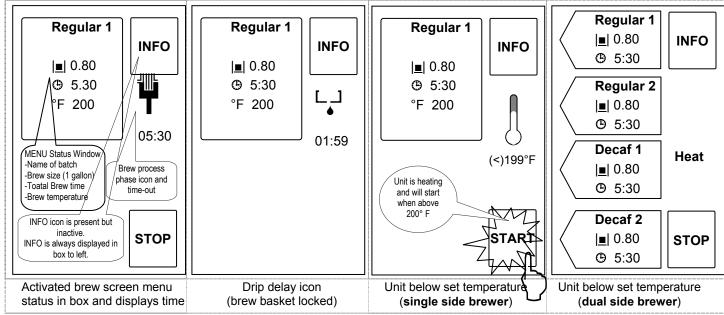


Brew operation-intuitive touch screen- When brew is started-the equipment displays the brew process graphically as shown Screens for dual brewer. CBS-2132XTS shown

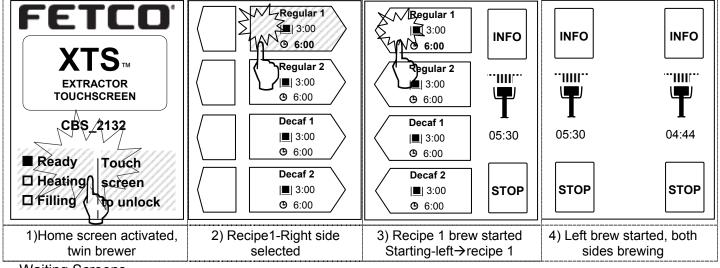


Waiting Screens




1) Hot water tank temp too 2) Brew at Temperature low. Brew cannot start. Note the :READY" icon is off & the "HEATING" icon is on. Brewer in "Automatic" temperature

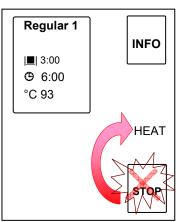

feature is set to "AUTO" and hot water tank temperature is too low. Brew will start when tank is at set-point.

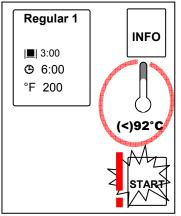

3) Brew at Temperature feature is "OFF"" and hot water tank temperature is below set point. Pressing "START" will begin brew at low water temperature!

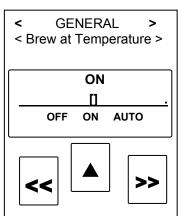

4) Programming screen for "Brew at Temperature" Unit is set by FETCO for "ON. "OFF and "AUTO" settings are not recommended

Service & Programming

Menu adjustments, name selection, programming, error codes, counters are accessed by activating touch screens.


To access the General Service Menu

PROGRAM, GENERAL, INPUTS, OUTPUTS, and OTHER (Service Menu).

- →Enter Service Menu by accessing the power switch on back of the panel
- 1)-Switch power "OFF" with power switch located on rear of brewer
- 2)-After at least ten seconds: Turn power switch "ON"
- 3)-Quickly touch and hold the XTS screen to enter the programming screens as shown below
- 4)-When entering The SERVICE MENU: the first screen in the group is "PROGRAM"
- 5)-Use right and left arrow icons to navigate through the five main SERVICE menu groups.
- 6)-The DOWN arrow navigation icon will open the FEATURE icon below.
- 6a)-Navigate through the Menu Item with the arrows, edit any if needed
- 6b)-When finished editing—press the UP arrow to go back through the menu items to save changes and exit
- 7)-The chart on the next page give the general service menu topics, the pages following list the details of the topics
- →When navigating up to "EXIT" leaves the Service Menu Screens and SAVES your settings on exiting.


The Menu Chart on the next page shows the main categories of the five SERVICE menus

When SERVICE MENU is entered—the first selection is "PROGAMMING Mode" Scroll through the five programming categories using the right and left arrow icons.

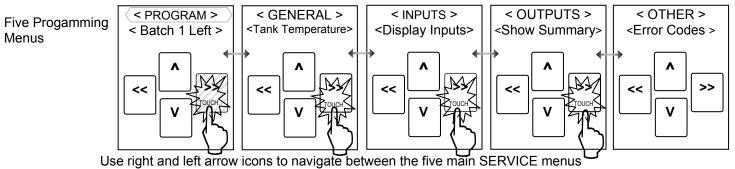


Navigating PROGRAMMING MENUES

Highlight desired menu path and location and use arrow icons to navigate service menu screens. HIGHLIGHT

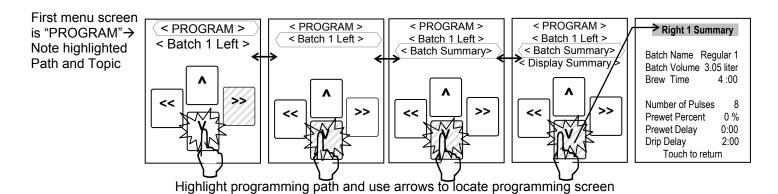

Programming menu layout

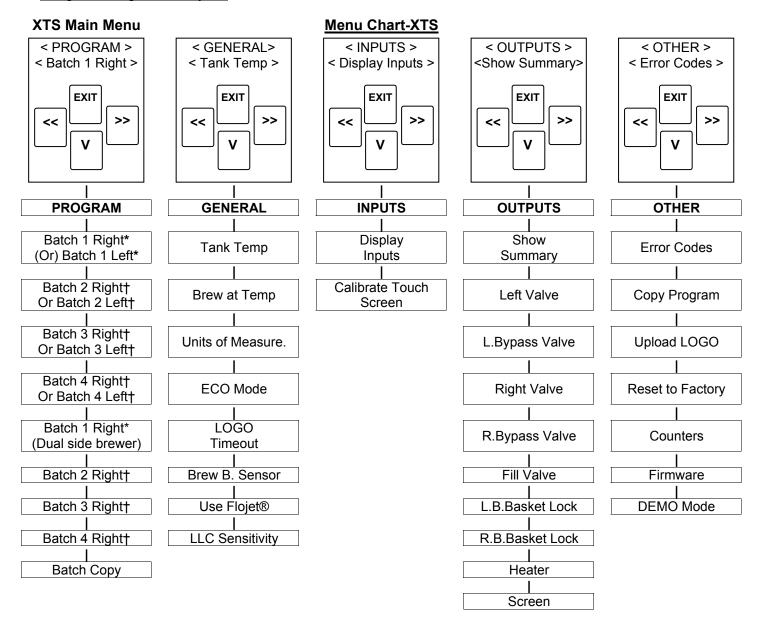

Menu Features: Batch Parameters

PROGRAM	Programming Items	Factory set Default	Programming Range	Notes		
Batch 1 LEFT*	Batch Summary	Display Summary	Entire recipe display	Example at bottom of column		
	Batch Name	Regular 1(-16)	Choose from list: Regular1	(Regular 1-16) -OR- Write: any name		
Models CBS-2130, CBS- 2140, CBS-2150 & CBS- 2160XTS-	Batch Volume	0.80 to 3:00 gal	3L/1gal -3.00 gal 0.25-0.5gal 1.25-3.10gal	Screen will display in range and units selected CBS-2160XTS is 3:00 gal		
	Brew Time	4:00mm:ss [2:00-10.00]	4:00 mm:ss [] 2:00-4.00 min 10:00	CBS-2160XTS 4:30 min		
	Nr Of Pulses	8	8 1 30	CBS-2160 has minimum of 2 pulses		
	Prewet Perc.	0%	0 %			
Pause after prewet completes	Prewet Delay	0%	0:00 mm:ss	This feature appears ONLY if Prewet >0:00		
	Bypass Perc.	0%	0 %			
This is a Safety Feature	Drip Delay	1:30 mm:ss 2:00 mm:ss for CBS-2160	1:30 mm:ss [] 0:30 5:00	Time that brew basket remains locked during final drip-out		
Batch 2 Left**	**[Batch 2-4-Righ	t and Batch2-4-Left]		elected-or-entirely deleted		
	Batch ON/OFF	ON	ON	This feature is only on 2-4 Batch 1 cannot be turned off		
	 Batch Name 	Regular 1(-16)	Choose from list: Regular1	(Regular 1-16) -OR- Write: any name		
Models CBS-2130, CBS- 2140, CBS-2150 & CBS- 2160XTS-	Batch Volume	0.80 to 3:00 gal	3L/1gal -3.00 gal	Screen will display in range and units selected CBS-2160XTS is 3:00 gal		
	Brew Time	4:00mm:ss [2:00-10.00]	4:00 mm:ss []	CBS-2160XTS 4:30 min		
	Nr Of Pulses	8	8 1 30	CBS-2160 has minimum of 2 pulses		
	Prewet Perc.	0%	0 %			
Pause after prewet completes	Prewet Delay	0%	0:00 mm:ss _[]	This feature appears ONLY if Prewet >0:00		
	Bypass Perc.	0%	0 %			
This is a Safety Feature	Drip Delay	1:30 mm:ss 2:00 mm:ss for CBS-2160	1:30 mm:ss [] 0:30 5:00	Time brew basket remains locked during drip-out		
Batch 3 Left **	(See Batch 2-Left)			Batch 1 Right		
Batch 4 Left **	(See Batch 2-Left)			Batch Name Regular 1		
Batch 1 Right *	(See Batch 1-Left)			Batch Volume 3.00 gal		
Batch 2 Right **	(See Batch 2-Left)			Brew Time 4:00		
Batch 3 Right **	(See Batch 2-Left)					
Batch 4 Right **	(See Batch 2-Left) Copy From Batch	L1	L1-L4;R1-R4	Number of Pulses 8		
Batch Copy	Copy To Batch	L1	L1-L4;R1-R4 L1-L4;R1-R4	Prewet Percent 0 %		
	Copy To Batch Copy?	L1→L2? (example)	NO	Prewet Delay 0:00		
*Batch 1 RIGHT Side & Ba	Drip Delay 1:30 Touch to return					
*Batch 1 cannot be disable	*Batch 1 RIGHT Side & Batch 1 LEFT Side cannot be disabled. (TWIN Brewer CBS-2102XTS) *Batch 1 cannot be disabled. (SINGLE Brewer)**Batch 2-4 can be disabled, and removed from display *Batch 1 cannot be disabled. (SINGLE Brewer)**Batch 2-4 can be disabled, and removed from display					

GENERAL	Programming Items	Factory set Default	Programming Range	Notes
	Tank Temp.	<u>200°F</u>	[200 °F] 77C/170F 97C/207F	Chart to correct for high altitude below
"OFF" allows brewing at any temperature.	Brew at Temp.	"ON"	ON OFF ON AUTO	SEE NOTE BELOW!
	 Units of Meas. Temperature	°C or °F	°F <u> </u>	[Switchable Units]
	• Volume	Gallons [Liters]	Gallons Gallons Liters	[Switchable Units]
Energy Saving Mode	ECO Mode	OFF	ECO Mode ON OFF	If Selected: After 1 hour of inactivity→Lowers hot water tank temperature to 170°F
	Logo Timeout	0:15 mm:ss	0:15 mm:ss 0:15 5:00	
This is a Safety Feature	Brew B. Sensor	NORMAL (SEE WARNINGS)	NORMAL NORMAL OVERRIDE	Factory or service use for servicing. "NORMAL" is recommended for safety.
	Use Flowjet	NO	NO NO YES	Trims water handling system for Flowjet
"NORMAL" for most water "HIGH" for R.O.	LLC Sensitivity	NORMAL	NORMAL NORMAL HIGH	Liquid level control sensitivity. High is for reverse osmosis water or very pure water.

BREW AT TEMPERATURE DEFINITONS

BREW AT TEMP: "ON"

(DEFAULT: FACTORY PROGRAMMED INTO BREWER)

"BREW START" Batch Section Pennants will not be accessible until tank temperature is at set point.

The "BREW START" screens with the Batch Section Pennants become accessible when hot water tank is at the selected temperature. A screen (example to the right) will display and show "BREW AT TEMP" is selected. →

BREW AT TEMP: AUTO USER SELECTABLE

"BREW START" will pause if the hot water tank is not at the selected temperature—and automatically start when it is at the set temperature.

If the temperature is too low, the brewer will wait until the proper temperature is reached. A screen (example to the right) will display showing a thermometer icon and the tank temperature ->. IMPORTANT: ALWAYS have dispenser(s) under the brewer when in the BREW AT TEMP mode

BREW AT TEMP: OFF USER SELECTABLE (Not recommended)
Allows brewing at any temperature above 170°F/82°C.

XTS TM
EXTRACTOR
TOUCHSCREEN

CBS 2100XTS
Ready
Heating
Filling

Tank Temp
200°F

INFO
Regular 1
1:00
9:5:30
Regular 2
1:00
9:5:30

Decaf 1

|<u>■</u>| 1:00 **③** 5:30

Decaf 2

1:00 5:30

200°F

STOP

C	Chart to correct for altitude for boiling point in tank water temperature.							
[ft]	[m]	Suggested Setting[°F]	Boiling point[°F]	Suggested Setting[°C]	Boiling point [°C]			
0	0	205	212.0	96	100.0			
500	152	205	211.0	96	99.5			
1000	305	200	210.1	93	98.9			
2000	610	200	208.1	93	97.8			
2500	762	200	207.2	93	97.3			
3000	914	200	206.2	93	96.8			
3500	1067	197	205.3	92	96.3			
4000	1219	195	204.3	91	95.7			
4500	1372	194	203.4	90	95.2			
5000	1524	194	202.4	90	94.7			
5500	1676	193	201.5	89	94.2			
6000	1829	192	200.6	89	93.6			
6500	1981	191	199.6	88	93.1			
7000	2134	190	198.7	87	92.6			
7500	2286	188	197.8	86	92.1			
8000	2438	187	196.9	86	91.6			
8500	2591	185	196.0	85	911			

ECO MODE-Energy saving mode DEFINITONS

If Selected: Turns heaters off after 1 hour of inactivity.

The hot water tank temperature will slowly decline to no lower than 60°C/170°F A screen (example to the right) will display showing "ECO Mode" is activated. →

To return from ECO-Mode

Tap the screen, ECO Mode turns off, and the brewer will heat to set temperature.

It takes approximately 7-15 minutes to return from 60°C/170°F to factory default 93°C/200°F

All FETCO commercial hot beverage equipment have well insulated hot water tanks and have engineered mechanical features to limit energy consumption.

Effective construction and insulation increases equipment life and lowers building HVAC costs. FETCO hot beverage equipment have the best energy savings of all major suppliers.



INPUTS	Programming Items	Factory set Default	Programming Range (display)	Notes
Display Inputs	• Input Summery		R. Brew Basket Sens. L. Brew Basket Sens. H. Liquid Level probe L. Liquid Level probe Tank Temperature Probe SD Card Recognized Tank Temp. 93°C	
Cal. Touch Scr		Calibrate	Calibrate	If <u>Yes:</u> Follow directions on the touch screen

INPUT	INPUT SUMMARY SCREEN				
Display Inputs (See "INPUTS" Service Screen)	Brew Basket Sensor High Liquid Level Probe Low Liquid Level Probe Tank Temp. Probe SD Card present□				
	Tank Temperature93C				
Use DISPLY INPUTS s	screen to assist in error code fault correction.				

Use DISPLY INPUTS screen to assist in error code fault correction.

There are two liquid level probes shown as High and Low High is the fill volume of the hot water tank. Low probe is the level when the heaters are sufficiently covered by water to start.

OUTPUTS	Programming Items	Factory set Default	Programming Range (display)	Notes
Show Summary	Output Summary		Left Brew FR 3200 Left Bypass FR 2400 Right Brew FR 3200 Right Bypass FR 2400 Screen Contrast 8 Screen Brightness 8 Touch To Return	FR=Flow Rate ml/min
Left Valve Test OR Calibrate	Left Valve Test	(Press to test)	TEST Press To Test TEST	Runs valve to verify flow. Have container under brew-basket!
,, ,, ,,	• L. Valve Calib	Calibrate *Flow Rate	1540 to 3200 ml p m 1400-2800 1950-3800	Factory or service use for flow rate adjustment
L. Bypass Valve Test OR Calibrate If bypass option availble	Left Bypass Valve Test	(Press to test)	TEST Press To Test TEST	Runs valve to verify flow. Have container under brew-basket!
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	• L. Bypass Valve Calib	Calibrate *Flow Rate	2150 to 2400 ml p m 1900-2100 2800	Factory or service use for flow rate adjustment
Left Valve disp	lay is only for CBS-210	2XTS dual side brewer.		rys RIGHT SIDE only
Right Valve Test OR Calibrate	Right Valve Test	(Press to test)	TEST Press To Test TEST	Runs Valve to verify flow. Have container under brew-basket!
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	R. Valve Calib	Calibrate *Flow Rate	1540 to 3200 ml p m 1400-2800 1950-3800	Factory or service use for flow rate
R. Bypass Valve Test OR Calibrate If bypass option availble	Right Bypass Valve Test	(Press to test)	TEST Press To Test TEST	Runs valve to verify flow. Have container under brew-basket!
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	R. Bypass Valve Calib	Calibrate *Flow Rate	2150 to 2400 ml p m l 1900-2100 2800	Factory or service use for flow rate adjustment
Fill Valve	• Fill Valve Test	(Press to test)	TEST Press To Test	Operates fill valve. Have container under both brew-baskets!
Left Basket Lk. Not on CBS 2130XTS	Left brew basket lock test	(Press to test)	TEST Press To Test TEST	Energizes brew basket lock. For factory or service use
Right Basket Lk. Not on CBS 2130XTS	Right brew basket lock test	(Press to test)	TEST Press To Test TEST	Energizes brew basket lock. For factory or service use
Heater	Heater Test	(Press to test)	TEST Press To Test TEST	Energizes Heater(s) Service use only.
Screen Brightness OR Contrast	Screen Contrast	Contrast	8 II I	
	S. Brightness	Brightness	8 11 10	

		Brew Valve and Bypa	
		d bypass valve settings and	
CBS-2152 & CBS-2162	<u>2 ml/min</u>	CBS-2151& CBS-2161	<u>lml/min</u>
Left Brew FR	3200	Right Brew FR	3200
Left Bypass FR	2400	Right Bypass FR	2400
Right Brew FR	3200	3	
Right Bypass FR	2400		
CBS-2132& CBS-2142	ml/min	CBS-2131&CBS-2141	ml/min
Left Brew FR	1540	Right Brew FR*	1540
Left Bypass FR*	2150	Right Bypass F	-R*
2150		3 - 71	
Dialet Danie ED*	4 = 40		
Right Brew FR*	1540		
Right Bypass FR	1540 2150		

How to calibrate the flow rate

Set the flow rates of components to adjust for taste profile and for over or under potting.

Built-in algorithms in Brewer controller software corrects brew parameter to customer preferences or to trim variations in flow control components

NOTICE: This operation requires operator hold finger on keypad position for one minute—without lifting it.

1) MEASURE THE FLOW RATE:

It is very important to calibrate a heated brewer, preferably a brewer that has been used for brewing.

- -Enter programming mode, scroll left to "OUTPUTS"
- -Scroll down to "Left(or)Right Valve Test"
- -Place 5 liter/2gal measuring container under empty brew-basket.
- One good way to measure is to weigh the test water. Use a scale for at least 5 kg/12lb
- -Press To Test the Brew Valve. →! Keep finger on touchpad for one minute! !!DO NOT STOP!! It is very important for this test to keep finger in place for the entire minute.

After one minute [1 min.]-calibration dispense will stop automatically.

Measure the results of the flow in the 5-liter measuring container and hold the number.

2) AUTOMATIC Built-in CALIBRATE THE FLOW RATE

- -Enter this number, in milliliters, into the calibration slider for the Valve tested in the OUTPUT MENU.
- -Use milliliters. If measured in fluid ounces (fl.oz) multiply by 29.57 to convert to milliliters
- -After entering the measured volume, exit PROGRAMMING and return to the normal screens

3) MANUAL METHOD Operator input: CALIBRATE THE FLOW RATE

Use the amount measured, in milliliters, divided by programmed value and multiply by the current setting

3200 ml p m*	← Example of	Actual Volume	CURRENT	_ NEW	Enter new setting on the
2800 3800	CBS-2160 brew valve slider	Programmed Volume	SETTING	SETTING	slider shown and EXIT to save

^{*}Current valve flow setting in milliliters per minute [mlpm] as shown in the value above slider in <u>OUTPUT</u> Flow Rate box-Obtain programmed volume from "PROGRAM" Menu under "Batch Summary".

Note—match correct batch number to correct side, if two sided.

By entering the new flow rate number into the brewer, the software automatically corrects the valve flow discrepancy

Default-factor	y set Flow Ra	tes; Brew Valve and By	pass
		e and bypass valve settings an	
CBS-2162	ml/min	CBS-2161	ml/min
Left Brew FR	3200	Right Brew FR	3200
Left Bypass FR	2400	Right Bypass FR	2400
Right Brew FR	3200		
Right Bypass FR	2400		
CBS-2152	ml/min	CBS-2151	ml/min
Left Brew FR	3200	Right Brew FR	3200
Left Bypass FR	2400	Right Bypass FR	2400
Right Brew FR	3200		
Right Bypass FR	2400		
CBS-2142	ml/min	CBS-2141	ml/min
Left Brew FR	1540	Right Brew FR	1540
Left Bypass FR	2150	Right Bypass FR	2150
Right Brew FR	1540		
Right Bypass FR	2150		
CBS-2130X1		do not have the BYPASS	SS feature
CBS-2132	ml/min	CBS-2131	ml/min
Left Brew FR	1540	Right Brew FR	1540
Right Brew FR	1540		

OTHER	Programming Items	Factory set Default	Programming Range (display)	Notes
Error Codes	Display Errors	(Codes)	1: 2: 3:	See Error Code Chart for references
	Reset Errors	(Reset)	Reset	Factory and Service use only. Do Not Reset
			then "ON". Do not reset the err	
error codes shou	ld be after completi	ng the service and f	factory diagnostics and correctin	
0 0	E 0D / D	0D \ D	SD→ Brewer	Setup upload
Copy Program	• From SD to B.	SD→ Brewer	YES NO	Please insert SD card with the setup data!
	• From B to SD	Brewer→ SD	Brewer→ SD II YES NO	Setup download Please insert an empty SD card with sufficient space (≤2GB). SD card must be clear of files
Upload Logo		Upload Logo	UPLOAD LOGO Are you sure YES NO	Please insert SD card with logo file!
Res to Factory & Select Brewer Type	See next line: "Select Brewer Configuration"	Reset to default	Reset to Default Are you sure YES NO	Completely overwrites all user setup, incl. user logo.
Select Brewer Configuration	CBS_2131 3L; CBS_2131 1G CBS_2132 3L; CBS_2132 1G CBS_2141; CBS_2142 CBS_2151; CBS_2152 &2152-2G CBS_2161; CBS_2162	Screen appears after pressing "Res to Factory" [Above]	Select Model CBS [2131-2152]Series	Scroll to your brewer and tap ENTER tab
Counters	Display Counters -OR- Display Resettable Counters	Counters Display Total Counters	Left Brews 0 Left Brew activated 0 Left Brew activated 0 Left Brew [litr] 0 Left Bypass activated 0 Left Bypass [litr] 0 Right Brews 0 Right Brew activated 0 Right Brew activated 0 Right Brew [litr] 0 Right Bypass activated 0 Right Bypass [litr] 0 Right Bypass [litr] 0 Fill valve Activated 0 Fill Valve [litr] 0 Heater Activated 0 Heater "ON" time 0:00 Touch To Return	Identical screen for Resettable Counters Will display when selected. See next line to reset to zero NOTE: "Total Counters" is not user resettable See table, next page, for counter screen, definitions
Reset Counters	Resets Counters	Reset All Counters	Reset All Counters Are you sure YES NO	Resetting will restart counter from zero
Firmware	• Firmware Version -Software type	Display Firmware Version	CBS_2132 [or model type] SW ver 3.0.12 BL ver 1.1.3 QP ver. 4.5.01 Flash=512kb	Displays firmware version
	Update Firmware	UPDATE	UPDATE I I I I I I I I I I I I I I I I I I I	Firmware upload Please insert SD card with the firmware file!
DEMO Mode	DEMO ON/OFF		OFF [] ON OFF	Demonstrates the controls for training. Disables all components in demo mode.

COUNTER Screen, Definition		
Total brews on left side	Left Brews	13
Actual brews on left side	Left Brew activated	13
Total volume produced by left side brewer	Left Brew [litr]	39
•		
Actual Bypass used on left side	Left Bypass activated	0
Total volume of left bypass	Left Bypass [litr]	0
Total brews on right side	Right Brews	41
Actual brews on right side	Right Brew activated	41
Total volume produced by right side brewer	Right Brew [litr]	0
Actual Bypass used on right side	Right Bypass activated	0
Total volume of right bypass	Right Bypass [litr]	0
Total cycles activated by fill valve	Fill valve Activated	0
Total cycles activated by fill valve	Fill Valve [litr]	0
Total heater cycles activated	Heater Activated	0
Total time heater has been energized	Heater "ON" time	0:00
	Touch To Return	

		Error	Codes	
→Con	itact specialized personnel fo	r error codes		
Code	Description	Possible Cause	Corrective Action	How to Clear Error Codes
001	Software error-error on start up or corrupted software	Improper start-up or shutdown	Restart , if still fault: reload software	
050	Short-circuit in temperature probe	Probe failure.	Replace probe.	TO CLEAR FAULT, Make repairs as required
051	Open temperature probe.	Bad probe connection, or probe failure.	Check all connections. Replace probe if necessary.	Below is the only way to clear error codes:
100	Initial Fill Error. Initial fill time was more than 11 minutes after power up.	Water supply flow rate is too low.	Watch for short potting during brew cycle. Investigate cause of low flow rate. (Clogged water filter)	1) Enter "PROGRAMMING" 2)Scroll left to "OTHER"
101	Error on refill Tank did not refill within 3 minutes.	Water supply flow rate is too low.	Watch for short potting during brew cycle. Investigate cause of low flow rate. (Clogged water filter)	3)Scroll down to "ERROR CODES"
102	Unwanted fill;	Possible leak in tank, fitting, or valve.	Occurs during pre-fill, low probe is uncovered	4)Scroll down to "Display Errors"
107	Fault Lower liquid level probe	Tank not filling	Occurs during pre-fill, low probe is uncovered, or wires are reversed low / high probe	5)Scroll left to "Reset Errors" 6)Scroll down to "Reset"
201	Heater open, high limit thermostat, or Solid State Relay (SSR) fault	Failure of: heating element, SSR, high Limit or low voltage	Check and replace heating elements if necessary.	7)Follow directions shown on screen.
255	Touch pad error	Usually from longer than 2 min contact. Or faulty reassembly after service	Restart , if still fault: reload software. If mechanical: reassemble correctly	Merely toggling ON/OFF switch will not clear error codes.
	INSERT BREW BASKET	Brew basket must be in place This is a SAFETY FEATURE	Insert brew basket into brewer rails to enable brewer	Error codes must be cleared by correcting the fault and entering PROGRAMMING and using the menus!

^{! →} Never attempt to defeat or override a brew basket-locking feature-this is a safety feature

Operator Training

Review the operating procedures with whoever will be using the brewer.

Pay particular attention to the following areas:

- 1. Always pre-heat the dispensers before the first use of each day by filling them half way with hot water, and letting them stand for at least 5 minutes.
- 2. Do not remove the brew basket from a coffee brewer until it has stopped dripping.
- 3. Make sure the dispenser is empty before brewing into it.
- 4. Show how to attach covers, close, and or secure the dispensers for transporting.
- 5. Show the location and operation of the water shut off valve as well as the circuit breaker for the brewer.
- 6. Steam from the tank will form condensation in the vent tubes. This condensation will drip into and then out of the brew baskets. Up to 1/4 cup/118cc discharging overnight is possible. Place an appropriate container under each brew basket when not in use.
- 7. We recommend leaving the power to the brewer on overnight. The water tank is well insulated and very little electricity is used to keep the tank hot. Leaving the brewer in the "ON" position will also avoid delays at the beginning of shifts for the brewer to reach operating temperature.

Cleaning & Maintenance

After Each Brew:

- 1. Dispose of grounds and rinse brew basket.
- Never strike a brewbasket or hit it against a hard surface.
 This will damage the brew cone, and may damage the brewbasket support rails
- 3. Rinse dispensers before reuse.

Every Day:

- 1. Wash brew basket with hot sudsy water.
- 2. Pull CSD from the spray head, it is magnetically attached. Use gloves or a heavy towel. → Wash off any film and reattach. Use vinegar if limescale filming is present.
- 3. Clean dispensers with hot suds water and a brush, rinse and air dry.
- 4. Use only a soft cloth and hot suds on the outside to avoid scratches. Never use abrasives that will scratch surface.

Weekly


- Use a commercial coffee dispenser cleaner such as URNEX™, TABZ™, DIP-IT™ or Squeak 'n Clean™.
- 2. Carefully Follow the instructions supplied with the cleaning product
- 3. Never use spray cleaners, solvent, solvent based cleaner or petroleum based polish anywhere on dispensers


Warning

- 1. Turn off power before any cleaning procedure, including wiping the exterior for appearance reasons.
- 2. Dry the exterior, especially the face panel, before turning on power.
- 3. Do not apply any type of spray cleaner on the face panel of this equipment.
- 4. Never use solvent or solvent-based cleaner or petroleum based polish anywhere on this equipment.
- 5. Dry the face of the touch pad before turning on power
- 6. Do not electrically energize this equipment or attempt operation without all covers in place and all screws fastened.
- 7. Unplug machine before disassembly or servicing.

Safety Notes

- 1. Professional installation is required. This appliance is manufactured only for commercial use
- 2. Operational requirements and maintenance for commercial cooking appliances differ from household appliances.
- 3. Operators must be trained for this equipment and must understand the use, maintenance and hazards.
- 4. Access to the service area is restricted to persons having safety/hygiene knowledge and practical experience of the coffee brewer. This appliance must be installed in locations where it can be overseen by adult trained personnel.
- 5. Do not attempt to move hot beverage equipment once it is filled. Drain equipment before moving.
- 6. FETCO commercial coffee brewers prepare large amounts of coffee or tea in a single batch using very hot water
- 7. Commercial coffee brewers provides very hot water from the sprayhead, brewbasket and faucet when it is pulled.
- 8. Coffee brewers may continue to dispense very hot water from the mechanically operated faucet after the electronic touchpad is completely disabled by turning off the power switch on the lower back of the unit, or unplugging the unit.
- 9. For safety, the brewer control locks the brew basket for 5.5 minutes after starting the brew.
- 10. Never attempt to defeat the factory set (default) time that the brew basket is locked for safety from start of brew.

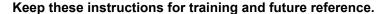

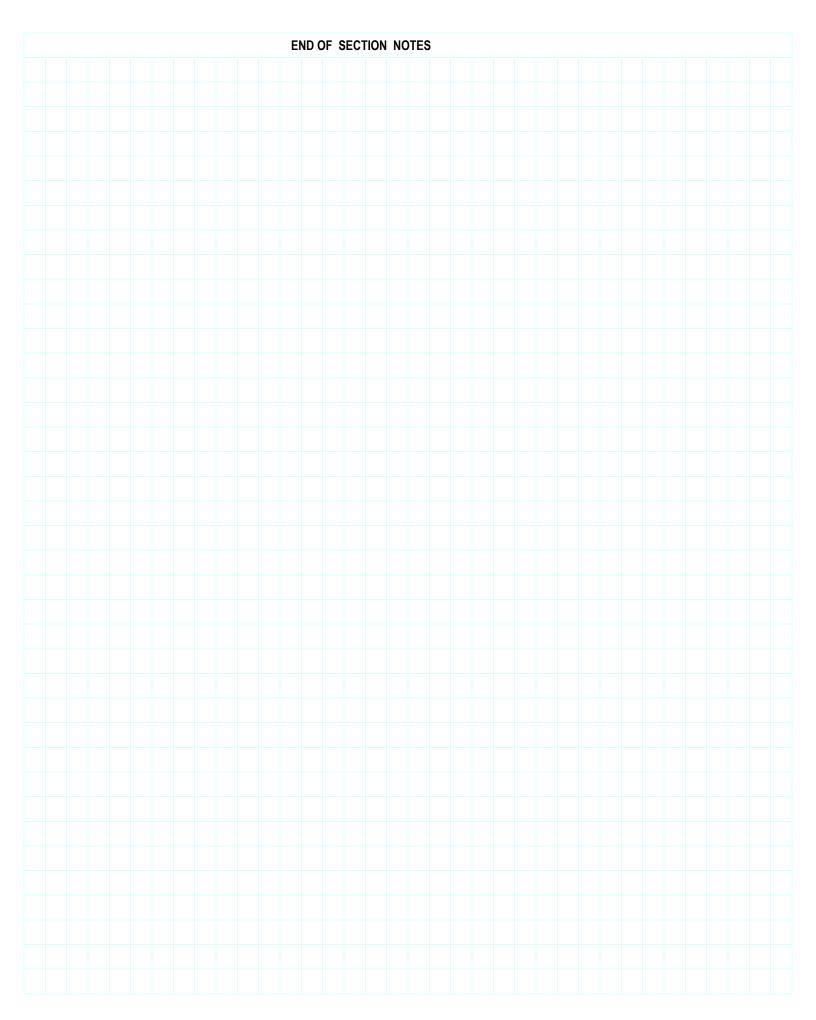



Installation and Service Guide

For Qualified Service Technicians Only

Models: CBS-2130XTS

Extractor Touch Screen Commercial Hot Beverage Equipment

FETCO Touch Screen Models: CBS-2130XTS

Airpot and dispenser series:

CBS-2131 3 liter CBS-2132 3 liter CBS-2131 1 gallon airpot CBS-2132 1 gallon airpot CBS-2131 & CBS-2132 1 gallon dispenser



Table of Contents: Installation and Service Guide S	ection—Reserved for qualified service technicians	
Service Guide to a Successful Installation2	Parts diagrams	8
Specifications and Requirements3	Wiring diagrams1	8
Specifications-Electrical and Output	Set-Up Instructions: 3 Liter. & 1 Galon configurations 2	2

Contact Information

FETCO®

Food Equipment Technologies Company 600 Rose Road

Lake Zurich • IL • 60047-0429 • USA

Internet: www.fetco.com

©2013-2016 Food Equipment Technologies Company

PATENTS: WWW.fetco.com/patents

Phone: (800) 338-2699 (US & Canada)

(847) 719-3000 **Fax:** (847) 719-3001 **Email:** sales@fetco.com

techsupport@fetco.com

P123 part B REV002 March 2016

Service Guide to a Successful Installation

(For Qualified Service Technicians Only)

General:

- 1. If not installed correctly by qualified personnel, the brewer will not operate properly and damage may result
- 2. Select and install appropriate legs for 3-liter or 1-gallon setup. Leg sets are shipped inside the brew basket
- 3. Some FETCO CBS-2100XTS series equipment have user configurable dispenser locator-see instructions.
- 4. Utilize only qualified beverage equipment service technicians for service and installation.
- 5. Always have an empty dispenser under sprayhead of all coffee brewing equipment-including when at idle
- 6. Damages resulting from improper installation are not covered by the warranty, and will void the warranty. Below are the key points to consider before installation:

Electrical:

- 1. All CBS_Series brewers require an electrical ground wire. Installation without grounding is dangerous.
- 2. Note Equipotentiality Terminal, if present, (To identify the terminals which, when connected together, bring the various parts of equipment or of a system to the same potential, not necessarily being the earth (ground) potential, e.g. for local bonding.)
- 3. Verify voltages, polarity, circuits, and circuit breaker access before attaching equipment.
- 4. Brewers in this series wire differently in regards to a nuatral wire. Review the wire diagrams.
- 5. The electrical diagram is located in the Users Guide and online at www.fetco.com.
- 6. Make sure of the tight grounding of the equipment and use the external ground bolt.
- 7. The installation must comply with applicable federal, state, and local codes having jurisdiction at your location. Check with your local inspectors to determine what codes will apply.

→ See wiring diagrams for connections

Plumbing:

- 1. North America: All installations must comply with applicable federal, state, or local plumbing codes.
- 2. All Others: The water and waste piping and connections shall comply with the International Plumbing Code 2003, International Code Council (ICC), or to the Uniform Plumbing Code 2003 (IAPMO).
- 3. Use an inline water filter for all beverage equipment.
- 4. Install the filter unit after a water shutoff valve and in a position to facilitate filter replacement.
- 5. The water line and newly installed filter cartage must be flushed thoroughly prior to connecting it to the brewer to prevent debris from contaminating the machine.
- 6. Verify that the water line will provide a flow rate of at least 1½gpm/(5.7lpm) per minute and the water pressure is between 20-75 psig (138-517kPa) before making any connections.
- 7. Use a wrench on the factory fitting when connecting the incoming water line. This will reduce stress on the internal connections and reduce the possibility of leaks developing after the install has been completed
- 8. Install a backflow prevention device. Most municipalities require a recognized backflow preventer.
- 9. Usable on all hot beverage and cold beverage equipment is a WATTS® SD-2 or SD-3.
- 10. WATTS spring loaded double check valve models are accepted by most zoning authorities.
 - →The check valve should be as close to the water supply inlet of the beverage equipment as possible.

Tank Drain

The water tank must be drained before maintenance procedures, and when the unit is to be relocated or shipped

- 1. Disconnect power to unit.
- 2. Move the unit near a sink or obtain a container large enough to hold four gallons of water and a hose clamp.

 Note that the tank may hold more than four gallons and that the drain line will be clamped to empty the container.
- 3. Remove the tank cover and allow the tank to cool to a safe temperature
- 4. The tank drain is located on the back of the unit. Turn the drain plug one-quarter turn in either direction
- 5. Pull the plug out far enough to expose the silicone tube
- 6. Using pliers loosen the hose clamp and move it back over the tube.
- 7. Crimp the tube an inch or two away from the drain plug to prevent water from flowing.
- 8. Use the other hand to pull the drain plug out of the tube.
- 9. Release the crimped tube and allow the water to flow into the sink or container.
- 10. Multiple buckets may be needed during the draining, see tank volumes below.

	Hot Water Tank Capacity
	3.5 gal 13.2 liter
CBS-2132Twin	6.4 gal 24 liter

Specifications and Requirements

Water Requirements:

CBS-2130XTS: 20-75 psig, (138-517kPa) 1½gpm/(5.7lpm) Water supplied to hot beverage equipment should be filtered

Water supplied Hardness >100 TDS (5.5 grain)

Water inlet fitting is a 3/8 inch male flare.

Brew Volume: Full Batch Up to 1 gallon/3.8 liters per brew Total Brew Cycle—Factory setting: 5.5 minutes=[4 minute brew time + 1.5 minute drip delay]

Coffee Filter Size:

13" X 5"" - standard FETCO # F002

Electrical: See electrical configuration chart.

Temperature, as set by factory:

200°F (93°C) inside water tank (at sea level)

Specifications-Electrical and Output Configurations For qualified service technicians


These specifica	These specifications apply to FETCO CBS-2131XTS & CBS-2132XTS manufactured as of January 2016									
	CBS-2130XTS USA and Canada									
CBS_2131	CBS_2131XTS—Single Single-Voltage Cord and Plug/Two wire electrical									
Configuration Codes	Heater Configuration	Voltage	Phase	Wires	Electrical Connection	KW	Amp Draw	Brew-Volume/Hour (3 liters per batch)		
E213153	1 X 1.5 kW	100 - 120	1	2+G	NEMA 5-15P	1.6	13.0	3.9 gal/14.8 liters		
E213151	1 X 2.3 kW	100 - 120	1	2+G	NEMA 5-20P	2.4	19.7	5.8 gal/22 liters		
E213157	1 X 3.0 kW	200 - 240	1	2+G	NEMA 6-15P	3.1	13.0	7.7 gal/29.1 liters		

CBS_2	Single-Voltage							
Configuration Code	Heater Configuration	Voltage	Phase	Wires	Electrical Connection	KW	Amp Draw	Brew-Volume/Hour (3 liters per batch)
E213251	2 X 2.3 kW	200-240	1	2+G	Terminal Block	4.7	19.7	11.5 gal/43.5
E213252	2 X 3.0 kW	200-240	1	2+G	Terminal Block	6.1	25.5	14.0 gal/53 liters
Please see w	Please see wiring diagrams located in back pages for installation notes.							


CBS_2131	Field con	figurab	le, Dua	I-Voltage Thre	ee wire	plus gr	ound electrical	
Configuration Codes	Heater Configuration	Voltage	Phase	Wires	Electrical Connection	KW	Amp Draw	Brew-Volume/Hour (3 liters per batch)
E213172	1 X 1.7 kW	120	1	2+G	NEMA 5-15P	1.8	14.7	4.4 gal/16.7 liter
(*Optional)	2 X 1.7 kW	(120/208-240)	1	(3+G)	Hardwire L1,L2,N+G	3.5	14.7	8.7 gal/33 liter
E213173	1 X 2.3 kW	120	1	2+G	NEMA 5-20P	2.4	19.7	5.8 gal/22 liter
(*Optional)	2X 2.3 kW	(120/208-240)	1	(3+G)	Hardwire L1,L2,N+G	4.7	19.7	11.0gal/41.6 liter

Sold with factory cord & plug for 120 Volt configuration. Optional user connection to a terminal block requiring L1, L2, N and ground to120/208-240 VAC User selectable for optional, dual in-series heater configuration: DO NOT WIRE L2 to nuetral. The optional configuration requires three wire plus ground.

SEE WIRING DIAGRAMS AT BACK OF THIS GUIDE

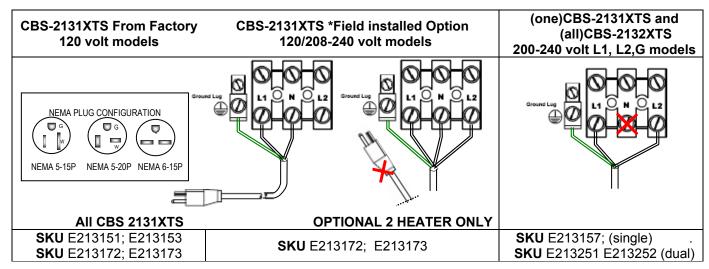


CBS-2131XTS Single Brewer-Technical Data Capacities & Measurements 3 liter&1 gallon single brewers									
Brewer Height Width Depth Empty Weight Filled Weight Filled Dispenser Shipping University Shipping Shipping Shipping Capacity									
CBS-2131XTS Single-3 liter	26 ¼" 666mm	11 ³ / ₄ "	20 ¾" 516mm	29 lb 13.2kg	55 lb 25 kg	66.2lb 34.6 kg	3.3 gal 12.4 l	49 lb 19 kg	17" x 23" x 29" 432 x584x737mm
CBS-2131XTS	27 3/4"	11 3/4"	20 %"	29 lb	55 lb	66.2lb	3.3 gal	49 lb	17" x 23" x 29"
Single-1 gallon	704mm	303mm	516mm	13.2kg	25 kg	34.6 kg	12.4 l	19 kg	432 x584x737mm

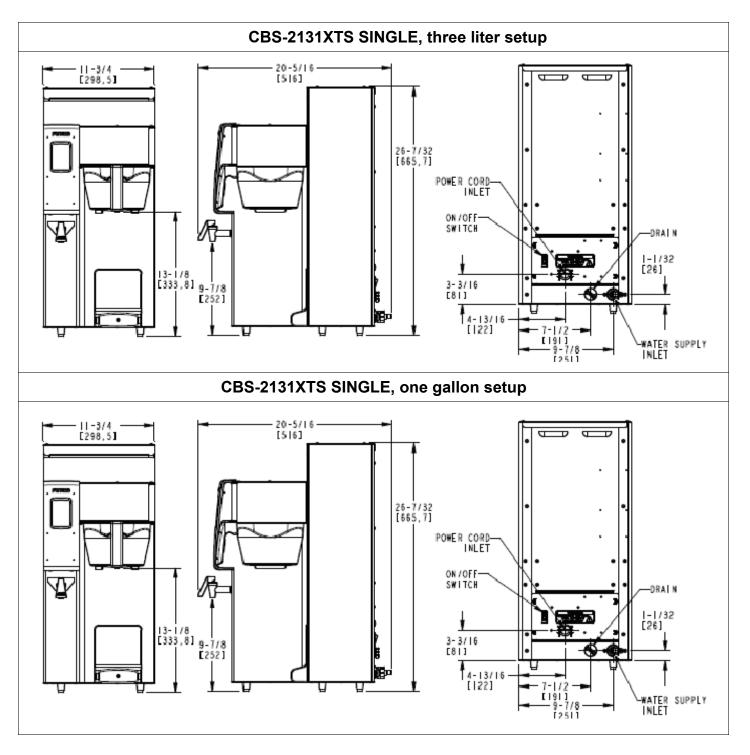

CBS-2132XTS TWIN-Technical Data Capacities & Measurements 3 liter&1 gallon dual brewers										
Brewer Height Width Depth Empty Weight Filled Weight Filled Dispenser Capacity Shipping Dimensions								Shipping Dimensions		
CBS-2132XTS	26 1 "	19 ¾"	20 %"	47lb	92lb	114.4lb	5.8 gal	61lb	23"x 25" x 29"	
Dual-3 liter	666mm	502mm	518mm	21.3kg	41.7kg	51.9 kg	22.1 I	28kg	584x635x737mm	
CBS-2132XTS	27 ¾"	19 ¾"	20 %"	47lb	92lb	114.4lb	5.8 gal	61lb	23"x 25" x 29"	
Dual-1 gallon	704mm	502mm	518mm	21.3ka	41.7ka	51.9 ka	22.1 I	28ka	584x635x737mm	


CBS-2132XTS TWIN, three liter setup 20-5/I [516] [9-3/4 [50],7] 26-7/32 [665,7] POWER CORD— INLET ON/OFF-SWITCH 3-3/16 [8]] WATER SUPPLY 9-7/8 [252] 4-13/16 [122] 7-1/2 DRAIN 9-7/8 [25]] CBS-2132XTS TWIN, one gallon setup 19-3/4 [50],73 20-5/I [516] 27-23/32 [703,8] POWER CORD-INLET 3-3/16 [8]] 11-3/8 [290] 1-1/16 [26] 4-13/1 [122] -DRAIN

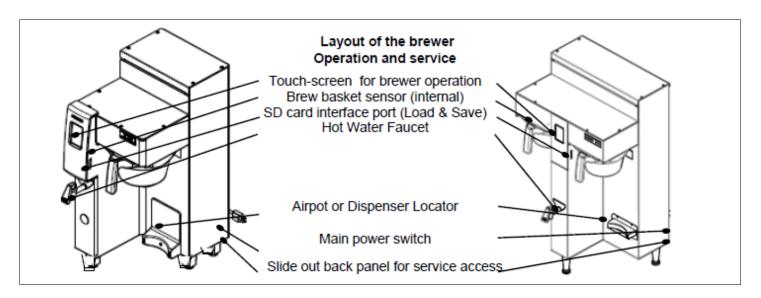

Installation safety and hygiene directions-For International and CE equipment

- 1. Access to the service area is restricted to persons having safety/hygiene knowledge and practical experience of the coffee brewer. This appliance must be installed in locations where it can be overseen by trained personnel.
- 2. For proper operation, this appliance must be installed indoors where the temperature is between 10°C/50°F to 35°C/95°F. Drain and remove all liquid from equipment and lines if exposed to freezing temperatures.
- 3. All commercial cooking equipment, including this unit, is not intended for use by children or persons with reduced physical, sensory, or mental capabilities. Ensure proper supervision of children and keep them away from the unit.
- 4. Children should be supervised to ensure that they do not play hot beverage equipment.
- 5. This unit must be installed and serviced by qualified personnel only.
- 6. Installation must conform to all local electrical and plumbing codes. Installation by unqualified personnel will void the unit warranty and may lead to electric shock or burn, as well as damage to unit and/or its surroundings.
- 7. If the power cord requires repair or replacement-it must be performed by the manufacturer or authorized service personnel with the specified cord only from the manufacturer in order to avoid a hazard.
- 8. Review the dimensions for the unit and verify that it will fit properly in the space intended for it. Verify that the counter or table will support the total weight of the brewer and dispensers when filled (See: Technical Data).
- 9. Place the brewer on the counter or stand. When the brewer is in position, level it front to back as well as side-to-side by adjusting the legs.
- 10. Brewers will need a sturdy supported surface for operation. Do not move brewers when filled.
- 11. Do not tilt appliance more than 10° to insure safe operation.
- 12. Unit is for protected indoor use only. Do not steam clean or use excessive water on unit.
- 13. This unit is not "jet-proof" construction. Do not pressure wash or use jet spray to clean this unit.
- 14. The unit is not waterproof-do not submerge or saturate with water.

Equipment exposed to flood and contaminated must not be used due to electrical and food safety. Do not operate if unit has been submerged or saturated with water.

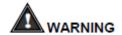

All electrical connections must be in accordance with local electrical codes and any other applicable codes. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

To prevent an electric shock hazard this device must be bonded to equipment in close proximity with an equipotential bonding conductor. This device is equipped with a bonding lug for this purpose and is marked with the following symbol






Labels and warnings for hot beverage equipment


For BACK PANEL of equipment (1046.00035.00)

	1102.00203.00			Spray Ho	ousing Assen	nbly Parts CBS-2130XTS
	5	Ref	QT Y	PAR	Г NO	DESCRIPTION
		1	1			Complete Spray Housing
ر. ا		2	1	1102.00	019.00	Replacement, Cascade Spray Dome
'	4	3	1			VALVE DIAPHRAGM
		3	1			ADAPTER PLATE, SPACER
	REBUILD KIT 1000.00098.00	3	1	#3 Contained in KIT		PLUNGER, DISPENSE VALVE 24VDC
	€	3	1	1000.00097.00		SPRING, DISPENSE VALVE 24VDC
	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	3	1			COIL AND FRAME ASSEMBLY DSV11 24VDC
		3	4			SCREW, #6-20 X 1/2", PHIL
	*	4	1			SPRAY HOUSING ASSY CSD DESIGN
	TO A	4	1			O-RING, AS568A-019, BUNA-N
		4	1	#4 Contained in KIT	1102.00019.00	ASSEMBLY, CASCADE SPRAY DOME
		4	1	1000.00096.00		ADAPTER, SPRAY HSG, DSV11 VALVE
		4	2			SCREW, M3.9x13, CHEESE PH
		4	1		1024.00063.00	O-RING,Lower 3 15/16" x 3/32"
	(AMB)	5		<u>alve rebuild kit</u> 000.00098.00	Kit con	utains: SPRING DIAPHRAGM PLUNGER

	Brew Basket Part		
Part Number E	Complete Plastic Brew Basket 8014218BN2	(STANDARD) CBS-2130X	TS
Brown colored insert		Part Number	Plug Insert color
is standard	(SCHIEF CONTRACTOR	1023.00195.00	BROWN PLUG, BB HANDLE
—		1023.00194.00	BLACK PLUG, BB HANDLE
Brew basket handle plug		1023.00190.00	RED PLUG, BB HANDLE
for polymeric brew	CHIEF. COL	1023.00191.00	GREEN PLUG, BB HANDLE
baskets is available in optional colors.		1023.00192.00	ORANGE PLUG, BB HANDLE
optional colors.		1023.00180.00	BLUE PLUG, BB HANDLE

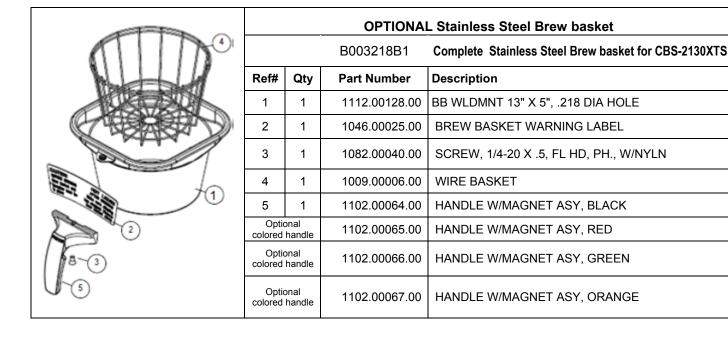


Parts diagrams

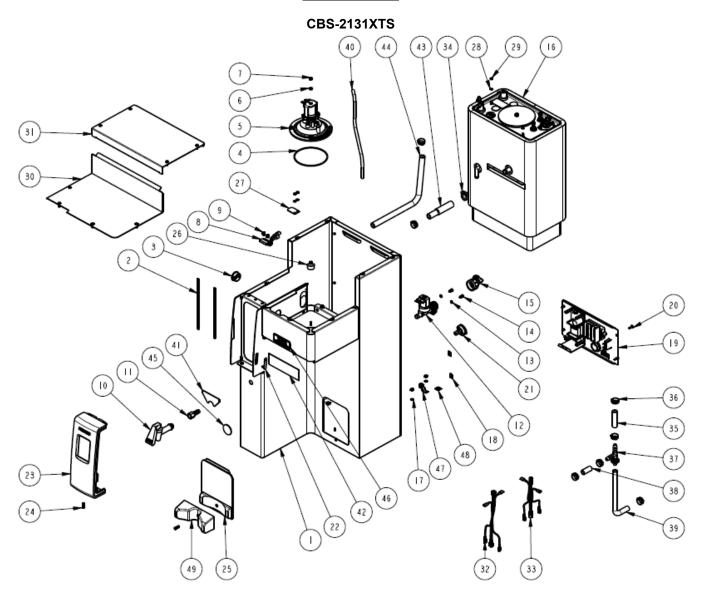


Parts Drawing CBS-2131 XTS Drawing number 1101.00151.00


			wing CBS-2131 XTS Drawing number 1101.00151.00
Ref	Qty	Part Number	Part Name and Description
1	1	1111.00036.00	WELDMENT BODY, COMPLETE, CBS-2131
2	2	1024.00049.00	EDGE PROTECTOR, 7.00"LG, CBS-2130
3	1	1086.00004.00	BUSHING, SNAP, 1" MOUNTING HOLE
4	1	1024.00063.00	O-RING, 3 15/16" x 3/32" CS, DASH # 154, BUNA-N, DURO-A50
5	1	1102.00203.00	ASSEMBLY, SPRAY HOUSING, DSVP11 DESIGN
6	4	1083.00010.00	WASHER, #10 SCREW W/NEOPRENE-BONDED SEAL
7	9	1084.00006.00	NUT, 8-32 18-8 HEX MACHINE SCREW
8	1	1102.00113.00	SWITCH, REED, ASSEMBLY
9	2	1029.00006.00	#4-40 NYLON FINGER NUT
10	1	1071.00010.00	FAUCET HPSC-BR-8 REGULAR HANDLE
11	1	1031.00003.00	FITTING, BARB 3/8'ID x 1/4" FPT
12	1	1057.00043.00	SOLENOID VALVE, SINGLE, 180 DEG, 240VDC
13	2	1083.00005.00	WASHER, M4 18-8 INTERNAL TOOTH LOCKWASHER
14	2	1082.00010.00	SCREW, M4x10 ZINC PLATED PAN PHILLIPS MACHINE
15	1	1102.00243.00	ADAPTER ASSY, 3/4" BSP x 1/4" NPT x 3/8" TUBE
16	1	1104.00082.00	TANK ASSY,1 X 2.3kW/120VAC,
16	1	1104.00083.00	TANK ASSY,1 X 1.5kW/120VAC,
16	1	1104.00086.00	TANK ASSY,1 X 3.0kW/240VAC
16	1	1104.00070.00	TANK ASSY, 2 X 1.7kW/120VAC
16	1	1104.00066.00	TANK ASSY, 2 X 2.3kW/120VAC
17	5	1083.00011.00	WASHER, #8 SCREW SIZE, INTERNAL TOOTH LOCK
18	11	1084.00011.00	NUT, CLIP ON (J-NUT), #6-32, 22-20 GA., BLK-PH FINISH
19	1	1102.00209.00	ASSEMBLY BACK PANEL, CBS-2131 AND 2141
20	12	1082.00017.00	SCREW, # 6-32 X 1/2" TRUSS HD PHIL., MACHINE
21	1	1023.00147.00	PLUG, TANK SERVICE DRAIN FOR 18GA AND UP BODY
22	1	1024.00040.00	CARD PLUG, HWD-2100
23	1	1102.00210.00	ASSEMBLY FRONT PANEL, CBS-2130
24	5	1082.00058.00	SCREW, # 8-32 X 5/8, FLAT HD, PH, 18-8 SS
25	1	1102.00259.00	LOCATOR ASSEMBLY,L3S-10, GRAY, CBS-2130
26	1	1023.00159.00	CORNER INSERT
27	1	1003.00259.00	BRACKET, BREW BASKET LOCK COVER
28	3	1083.00009.00	WASHER, #6 SCREW , INTL TOOTH LOCKWASHER
29	3	1084.00010.00	NUT, HEX, #6-32, UNDERSIZED, ZINC PLATED
30	1	1001.00126.00	COVER, UPPER BASE, CBS-2131 AND 2141
31	1	1001.00125.00	COVER, TOP CBS-2131 AND 2141
32	1	1402.00039.00	HARNESS, HIGH AMP, CBS-2131
33	1	1402.00040.00	HARNESS, LOW AMP, CBS-2131
34	1		CLAMP, HOSE, SIZE "G" NYLON
35	1	1025.00060.00	TUBE, 9/16'OD X 5/16"ID X 3.25"LG
36	8	1086.00003.00	UNICLAMP, 15.9 HOSE OD CLAMP
37	1	1029.00002.00	FITTING, HOSE BARB TEE, SIZE 3/8", NYLON
38	1	1025.00058.00	TUBE, 9/16'OD X 5/16"ID X 25.00"LG
39	1	1025.00077.00	TUBE, 9/16 OD x 5/16 ID x 6.50 LG.
40	1	1025.00078.00	TUBE, 5/16 OD x 3/16 ID x 14.00 LG.
41	1	1046.00006.00	LABEL, WARNING, "HOT WATER FAUCET"
42	1	1046.00003.00	LABEL, CSD WARNING, 1.5" X 5.0"
43	1	1024.00065.00	CONNECTOR, SILICONE, TANK TO BREW VALVE
44	1	1025.00028.00	TUBE, 5/8"OD X 3/8"ID X 11"LG, HOT WATER VALVE, IN
45	1	1041.00002.00	LABEL, "CSD
46	1	1041.00013.00	LABEL, XTS, 2130,2140 AND 2150 SERIES
47	1	1065.00002.00	CONNECTOR, COPPER LUG
48	1	1044.00012.00	LABEL GROUND CE
49	1	1023.00221.00	ADAPTER FOR AIRPOT, GRAY, CBS-2130
*	1	B014218BN2	Plastic Brew Basket: Standard-included with all equipment
+	1	B003218B1	OPTIONAL Stainless Steel Brew Basket
*	4	1073.00019.00	One Inch legs [for 3 liter brewer configuration]
*	4	1073.00016.00	2-1/2 Inch Legs [for 1 gallon brewer configuration]
*Stand		cluded with all equipme	
2.3.70			1 Show access, to be sugge

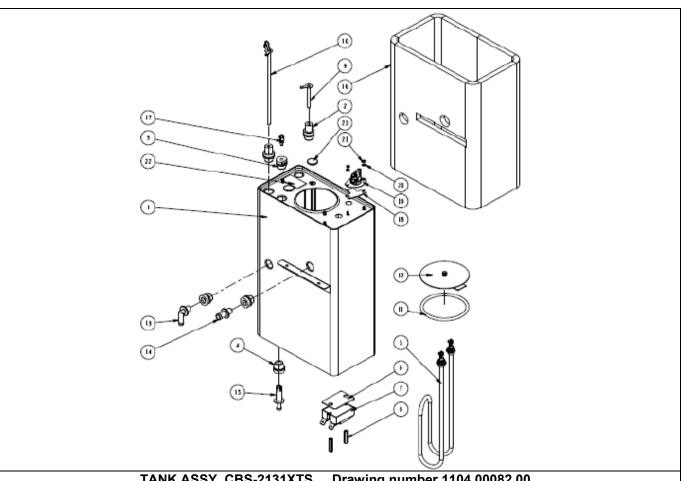

	TANK ASSY, CBS-2131XTS Drawing number 1104.00082.00				
	Qty				
Ref#	E213151 & E213153 & E213157	E213172 & E213173	Part number	Description	
1	1	1	1114.00102.00	WELDMENT TANK, CBS-2131, TWO HEATERS, GROMMET	
2	2	2	1024.00053.00	LEVEL AND TEMP PROBE GROMMET	
3	1	1	1024.00062.00	GROMMET, SHORT, SILICONE, LEVEL AND TEMP PROBE	
4	3	3	1024.00050.00	GROMMET, SILICONE, 11.4mm ID	
5	1	2	1107.00018.00	HEATER ASSEMBLY, IMMERSION 3.0kW/240VAC	
5	1	2	1107.00019.00	HEATER ASSEMBLY, IMMERSION 2.3kW/120VAC	
5	_	2	1107.00022.00	HEATER ASSEMBLY, IMMERSION 1.7kW/120VAC	
5	1	-	1107.00021.00	HEATER ASSEMBLY, IMMERSION 1.5kW/120VAC	
6	1	2	1003.00140.00	ALUMINUM BRACKET FOR SSR	
7	1	2	1052.00033.00	RELAY, SOLID STATE, 50A/480VAC, W/BUILD IN VARISTOR	
8	2	2	1081.00042.00	STANDOFF, 1/4" HEX	
9	1	1	1112.00002.00	PROBE WELDMENT, WATER LEVEL 2.25" LG	
10	1	1	1102.00161.00	PROBE ASSEMBLY, TEMP. AND LLC, HWD-2100	
11	1	1	1024.00007.00	O-RING, DASH #344, TANK COVER	
12	1	1	1102.00007.00	TANK COVER ASSEMBLY	
13	1	1	1023.00183.00	FITTING, DILUTION, TBS-2121	
14	1	1	1023.00167.00	FITTING, BREW, GROMMET DESIGN	
15	1	1	1023.00166.00	FITTING, COLD WATER INLET, GROMMET DESIGN	
16	1	1	1022.00063.00	TANK INSULATION, CBS-2131e, GROMMET DESIGN	
17	1	1	1029.00023.00	FITTING, SINGLE BARBED ELBOW, 1/4", KYNAR	
18	1	2	1003.00005.00	BRACKET, ONE SHOT THERMOSTAT	
19	1	2	1053.00003.00	THERMOSTAT, SINGLE SHOT, 240V/40A	
20	2	2	1083.00009.00	WASHER, #6 SCREW , INTL TOOTH LOCKWASHER	
21	2	2	1084.00010.00	NUT, HEX, #6-32, UNDERSIZED, ZINC PLATED	
22	1	1	1044.00004.00	LABEL, DANGER-HIGH VOLTAGE	
23	2	ı	1024.00054.00	GROMMET, SILICONE PLUG	

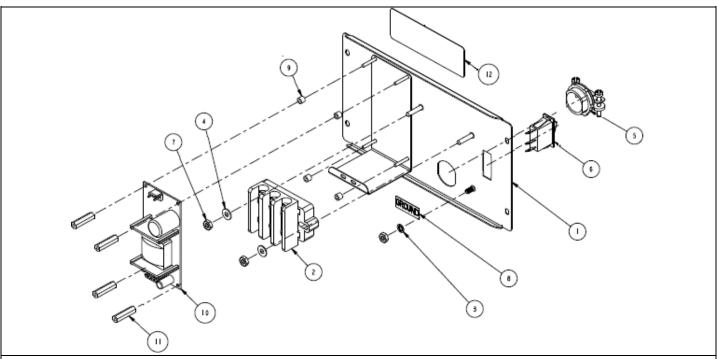


	BACK PANEL ASSEMBLY, CBS-2131 1102.00209.00				
Ref#	Qty	Part number	Description		
1	1	1112.00226.00	WELDMENT BACK COVER 2131 AND 2141		
2	1	1052.00002.00	TERMINAL BLOCK, 3 POLE, W/ MARKING STRIP		
3	1	1083.00011.00	WASHER, #8 SCREW SIZE, INTERNAL TOOTH LOCK		
4	2	1083.00016.00	WASHER, #8 SCREW SIZE, FLAT		
5	1	1086.00008.00	CONNECTOR, CABLE CLAMP, 3/4"		
6	1	1058.00020.00	SWITCH, PWR ROCKER RED, ILLUM. 250VAC		
7	3	1084.00006.00	NUT, 8-32 18-8 HEX MACHINE SCREW		
8	1	1044.00003.00	LABEL GROUND		
9	4	1081.00006.00	SPACER, 6MM OD x 3.2MM ID x 5MM LG, Z/P		
10	1	1052.00001.00	POWER SUPPLY, 90-264VAC/24VDC, 1.8A		
11	4	1029.00012.00	SPACER, .25" HEX X 1" LG, FEM #4-40 THREAD		
12	1	1046.00030.00	LABEL WARNING, DISCONNECT FROM POWER SOURCE		

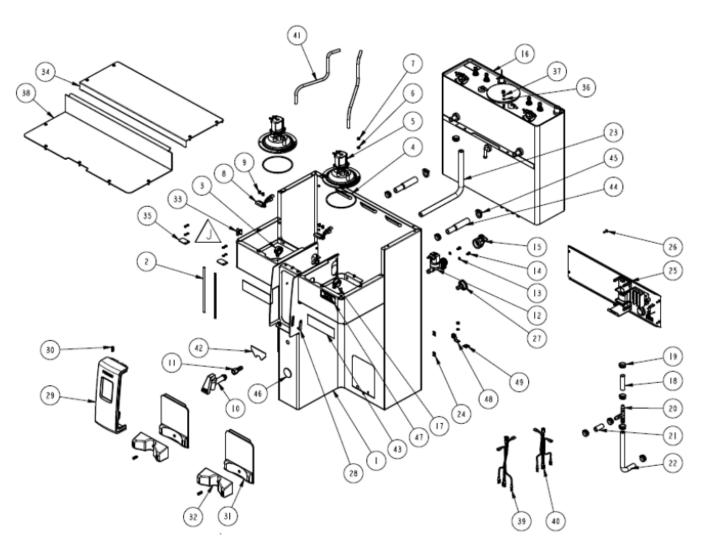


CBS-2132 XTS

Drawing number 1104.00050.00

	CBS-2132 XTS Drawing number 1104.00050.00			
Ref#	Qty	Part number	Description	
1	1	1111.00062.00	WELDMENT BODY, COMPLETE, CBS-2132 XTS, BB LOCK	
2	2	1024.00049.00	EDGE PROTECTOR, 7.00"LG, CBS-2130	
3	2	1086.00004.00	BUSHING, SNAP, 1" MOUNTING HOLE	
4	2	1024.00063.00	O-RING, 3 15/16" x 3/32" CS, DASH # 154, BUNA-N, DURO-A50	
5	2	1102.00203.00	ASSEMBLY, SPRAY HOUSING, DSVP11 DESIGN	
6	8	1083.00010.00	WASHER, #10 SCREW W/NEOPRENE-BONDED SEAL	
7	13	1084.00006.00	NUT, 8-32 18-8 HEX MACHINE SCREW	
8		1102.00113.00	SWITCH, REED, ASSEMBLY	
9	4	1029.00006.00	#4-40 NYLON FINGER NUT	
10		1071.00010.00	FAUCET HPSC-BR-8 REGULAR HANDLE	
11		1031.00003.00	FITTING, BARB 3/8'ID x 1/4" FPT	
12		1057.00043.00	SOLENOID VALVE, SINGLE, 180 DEG, 240VDC	
13		1083.00005.00	WASHER, M4 18-8 INTERNAL TOOTH LOCKWASHER	
14		1082.00010.00	SCREW, M4x10 ZINC PLATED PAN PHILLIPS MACHINE	
15		1102.00243.00	ADAPTER ASSY, 3/4" BSP x 1/4" NPT x 3/8" TUBE	
16	1	1104.00052.00	TANK ASSY, 2 X 3.0kW/240V, CBS-2132 XTS	
16	1	1104.00057.00	TANK ASSY, 2 X 2.3 kW/240V, CBS-2132 XTS	
17	5	1083.00011.00	WASHER, #8 SCREW SIZE, INTERNAL TOOTH LOCK	
18	1	1025.00060.00	TUBE, 9/16'OD X 5/16"ID X 3.25"LG	
19	10	1086.00003.00	UNICLAMP, 15.9 HOSE OD CLAMP	
20	1	1029.00002.00	FITTING, HOSE BARB TEE, SIZE 3/8", NYLON	
21	1	1025.00058.00	TUBE, 9/16'OD X 5/16"ID X 25.00"LG	
22	1	1025.00077.00	TUBE, 9/16 OD x 5/16 ID x 6.50 LG.	
23	1	1025.00028.00	TUBE, 5/8"OD X 3/8"ID X 11"LG, HOT WATER VALVE, IN	
24	12	1084.00011.00	NUT, CLIP ON (J-NUT), #6-32, 22-20 GA., BLK-PH FINISH	
25	1	1102.00208.00	ASSEMBLY BACK PANEL, CBS-2132 AND 2142	
26	13	1082.00017.00	SCREW, # 6-32 X 1/2" TRUSS HD PHIL., MACHINE	
27	1	1023.00147.00	PLUG, TANK SERVICE DRAIN FOR 18GA AND UP BODY	
28		1024.00040.00	CARD PLUG, HWD-2100	
29		1102.00210.00	ASSEMBLY FRONT PANEL, CBS-2130	
30		1082.00058.00	SCREW, # 8-32 X 5/8, FLAT HD, PH, 18-8 SS	
31		1102.00259.00	LOCATOR ASSEMBLY,L3S-10, GRAY, CBS-2130	
32	2	1023.00221.00	ADAPTER FOR AIRPOT, GRAY, CBS-2130	
33	2	1023.00159.00	CORNER INSERT	
34	1	1001.00127.00	COVER, TOP CBS-2132 AND 2142	
35	2	1003.00259.00	BRACKET, BREW BASKET LOCK COVER	
36	5	1083.00009.00	WASHER, #6 SCREW, INTL TOOTH LOCKWASHER	
37	5	1084.00010.00	NUT, HEX, #6-32, UNDERSIZED, ZINC PLATED	
38	1	1001.00128.00	COVER, UPPER BASE, CBS-2132 AND 2142	
39	1	1402.00037.00	HARNESS, HIGH AMP, CBS-2132 UL	
40	1	1402.00038.00	HARNESS, LOW AMP, CBS-2132 GRAVITY	
41	2	1025.00078.00	TUBE, 5/16 OD x 3/16 ID x 14.00 LG.	
42	1	1046.00006.00	LABEL, WARNING, "HOT WATER FAUCET"	
43	2	1046.00003.00	LABEL, CSD WARNING, 1.5" X 5.0"	
44	2	1024.00065.00	CONNECTOR, SILICONE, TANK TO BREW VALVE	
45	2	1086.00002.00	CLAMP, HOSE, SIZE "G" NYLON	
46	1	1041.00002.00	LABEL, "CSD"	
47	1	1041.00013.00	LABEL, XTS, 2130,2140 AND 2150 SERIES	
48	1	1065.00002.00	CONNECTOR, COPPER LUG	
	2	B014218BN2	Plastic Brew Basket: Standard-included with all equipment	
†	2	B003218B1	OPTIONAL Stainless Steel Brew Basket	
*	4	1073.00019.00	One Inch legs [for 3 liter brewer configuration]	
	4	1073.00016.00	2-1/2 Inch Legs [for 1 gallon brewer configuration]	
~Standa	Standard-included with all equipment †-Option accessory for purchase			

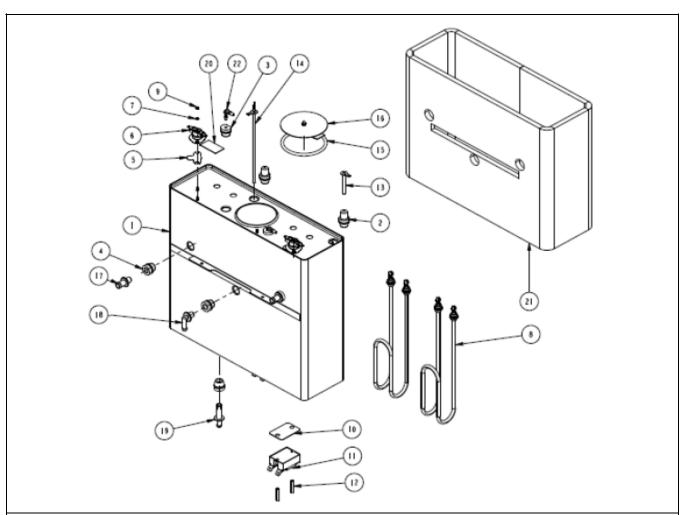


	CBS-2132 XTS Hot Water Tank Drawing 1104.00052.00				
Ref#	Qty	Part number	Description		
1	1	1114.00081.00	WELDMENT TANK CBS-2132, GROMMET DESIGN		
2	2	1024.00053.00	LEVEL AND TEMP PROBE GROMMET		
3	2	1024.00062.00	GROMMET, SHORT, SILICONE, LEVEL AND TEMP PROBE		
4	4	1024.00050.00	GROMMET, SILICONE, 11.4mm ID		
5	2	1003.00005.00	BRACKET, ONE SHOT THERMOSTAT		
6	2	1053.00003.00	THERMOSTAT, SINGLE SHOT, 240V/40A		
7	4	1083.00009.00	WASHER, #6 SCREW , INTL TOOTH LOCKWASHER		
8	2	1107.00020.00	HEATER ASSEMBLY, IMMERSION 2300W /240VAC		
8	2	1107.00018.00	HEATER ASSEMBLY, IMMERSION 3000W/240VAC		
9	4	1084.00010.00	NUT, HEX, #6-32, UNDERSIZED, ZINC PLATED		
10	2	1003.00140.00	ALUMINUM BRACKET FOR SSR		
11	2	1052.00033.00	RELAY, SOLID STATE, 50A/480VAC, W/BUILD IN VARISTOR		
12	4	1081.00042.00	STANDOFF, 1/4" HEX		
13	1	1112.00002.00	PROBE WELDMENT, WATER LEVEL 2.25" LG		
14	1	1102.00161.00	PROBE ASSEMBLY, TEMP. AND LLC, HWD-2100		
15	1	1024.00007.00	O-RING, DASH #344, TANK COVER		
16	1	1102.00007.00	TANK COVER ASSEMBLY		
17	2	1023.00167.00	FITTING, BREW, GROMMET DESIGN		
18	1	1023.00183.00	FITTING, DILUTION, TBS-2121		
19	1	1023.00166.00	FITTING, COLD WATER INLET, GROMMET DESIGN		
20	1	1044.00004.00	LABEL, WARNING-HIGH VOLTAGE		
21	1	1022.00064.00	INSULATION TANK, ONE PIECE, CBS-2132		
22	2	1029.00023.00	FITTING, SINGLE BARBED ELBOW, 1/4", KYNAR		

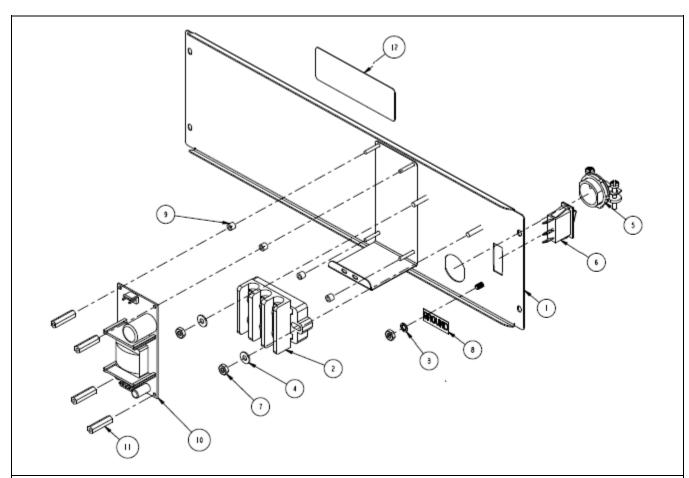


	BACK PANEL ASSEMBLY, CBS-2132 1102.00208.00				
Ref#	Qty	Part number	Description		
1	1	1112.00227.00	WELDMENT, BACK COVER CBS-2132 AND 2142		
2	1	1052.00002.00	TERMINAL BLOCK, 3 POLE, W/ MARKING STRIP		
3	1	1083.00011.00	WASHER, #8 SCREW SIZE, INTERNAL TOOTH LOCK		
4	2	1083.00016.00	WASHER, #8 SCREW SIZE, FLAT		
5	1	1086.00008.00	CONNECTOR, CABLE CLAMP, 3/4"		
6	1	1058.00020.00	SWITCH, PWR ROCKER RED, ILLUM. 250VAC		
7	3	1084.00006.00	NUT, 8-32 18-8 HEX MACHINE SCREW		
8	1	1044.00003.00	LABEL GROUND		
9	4	1081.00006.00	SPACER, 6MM OD x 3.2MM ID x 5MM LG, Z/P		
10	1	1052.00001.00	POWER SUPPLY, 90-264VAC/24VDC, 1.8A		
11	4	1029.00012.00	SPACER, .25" HEX X 1" LG, FEM #4-40 THREAD		
12	1	1046.00030.00	LABEL WARNING, DISCONNECT FROM POWER SOURCE		


CBS 2131XTS WATER HANDELING LAYOUT

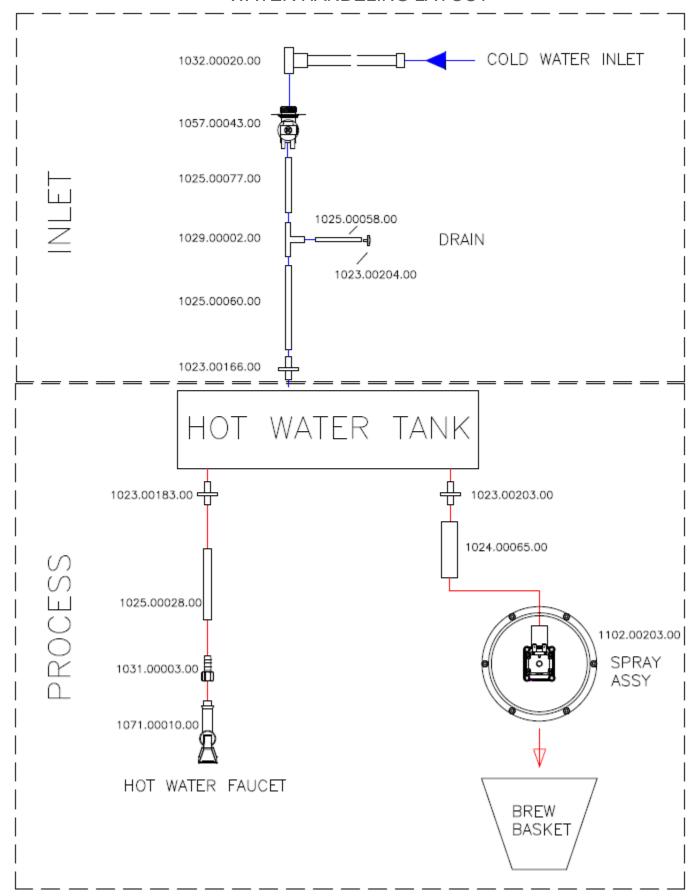

CBS 2132XTS WATER HANDELING LAYOUT

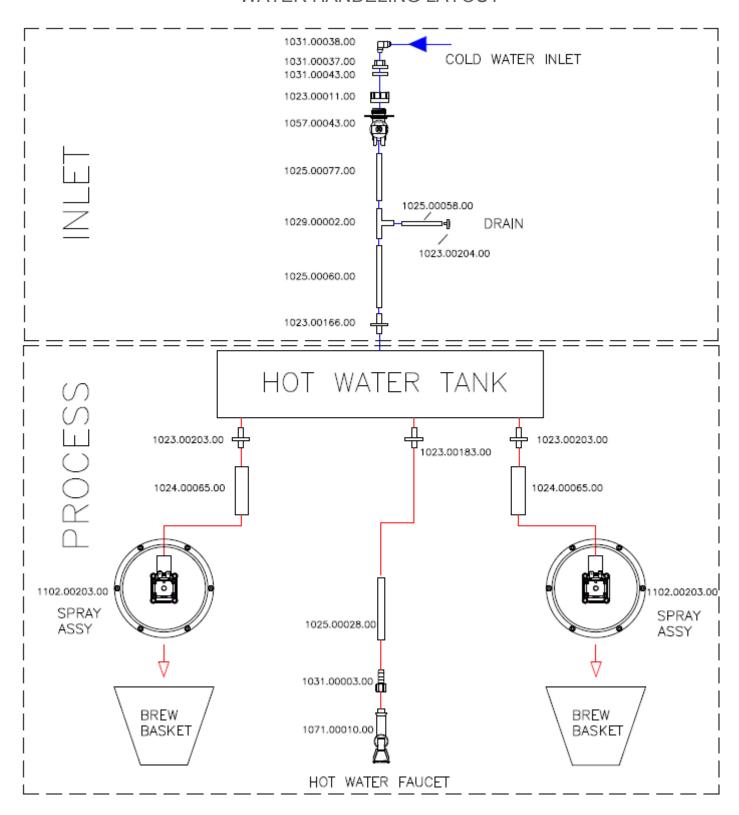


SKU NUMBER Heater Configuration E213251 2 X 2.3 kW / 240 Vac E213252 2 X 3.0 kW / 240 Vac

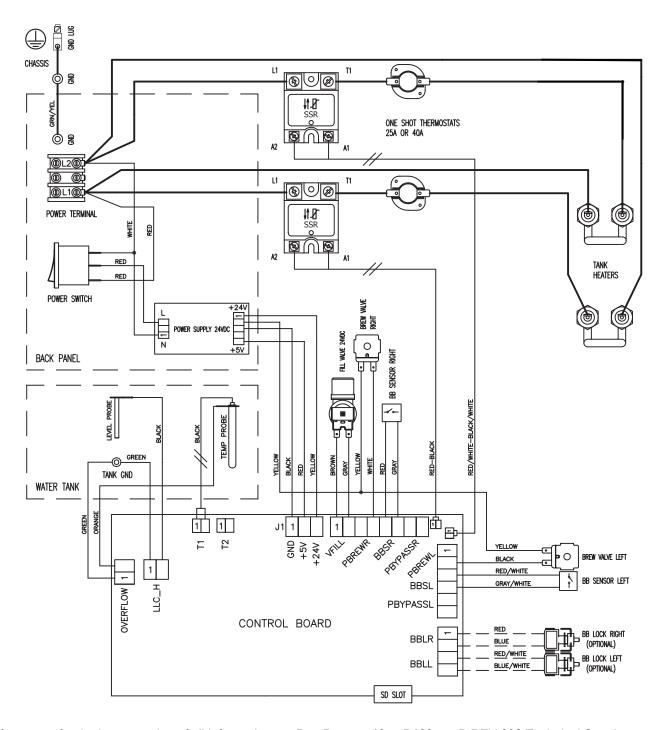

Go to fetco.com for the latest version of all information


Part B page 18 P123 partB REV 002 Technical Supplement March, 2016


FE	8888		FOOD EQUIPMENT TECHNOLOGY COMPANY 600 ROSE RD. LAKE ZURICH, IL 60047 PHONE: 847–719–3000, FAX: 847–719–3001 WWW.FETCO.COM
DWG. NAME: WIRING, CBS_2132XTS, (L1, L2 + GND), 2 HEATERS			
DRAWN BY		SCALE N/A	MATERIAL N/A
CHK'D S	z	SIZE A	DRAWING NO.
APP'D	N	DATE 04-22-2013	1401.00050.00

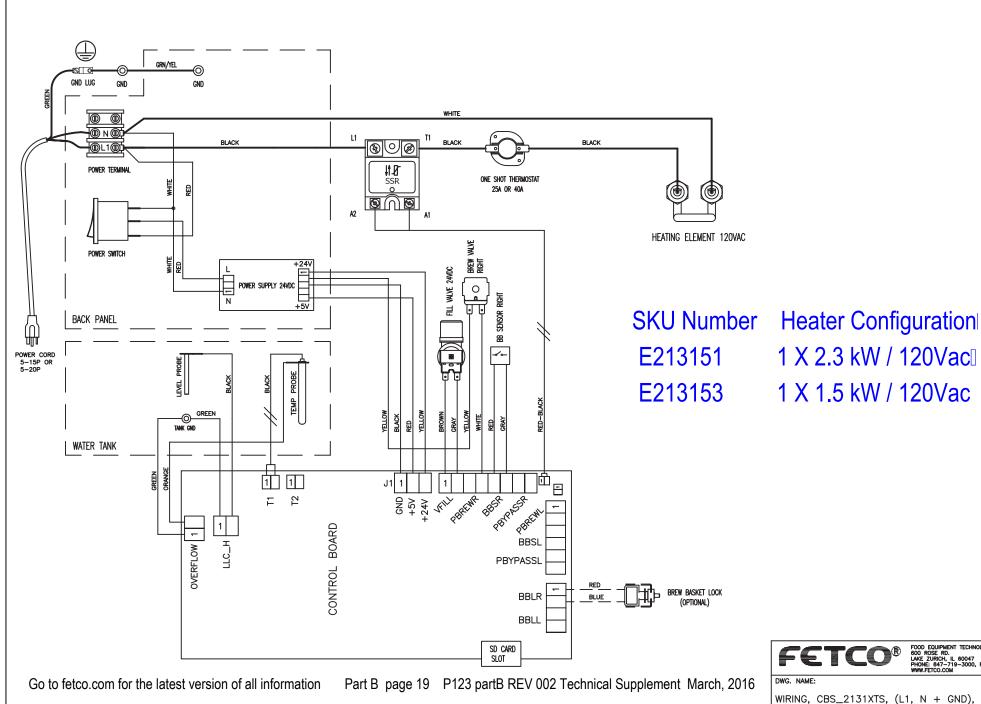

CHK'D

WIRING, CBS_2131XTS, (L1, N + GND), 1 HEATER

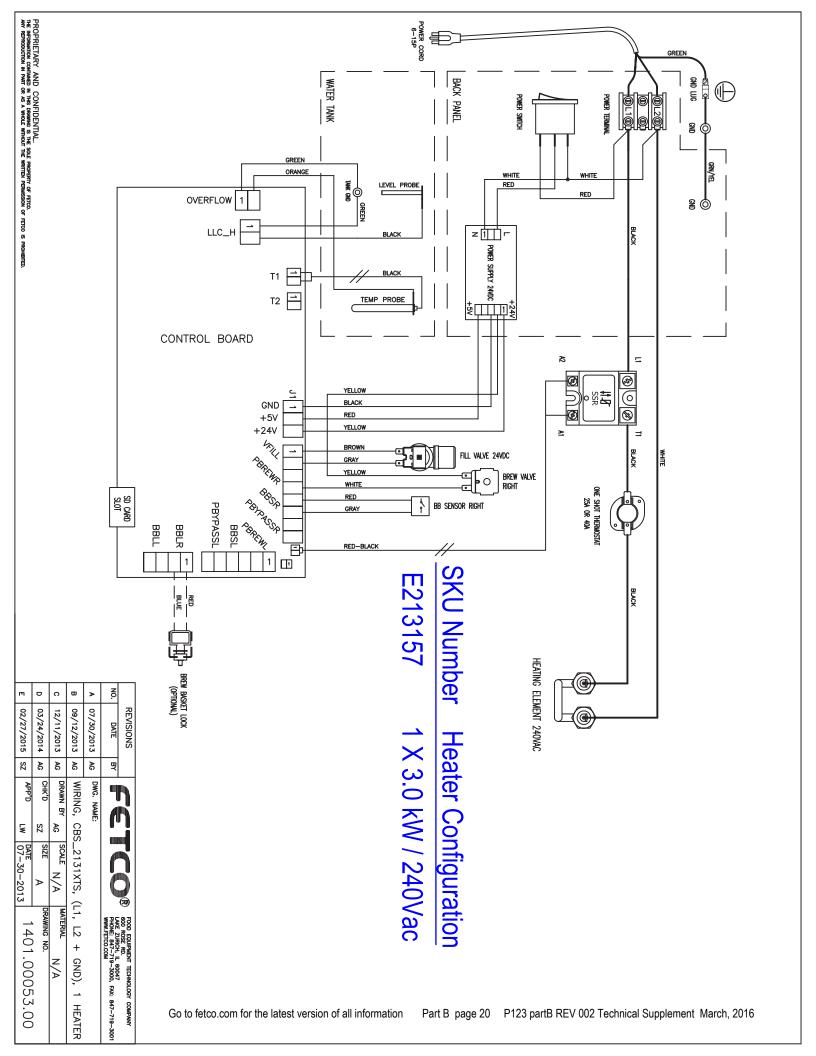

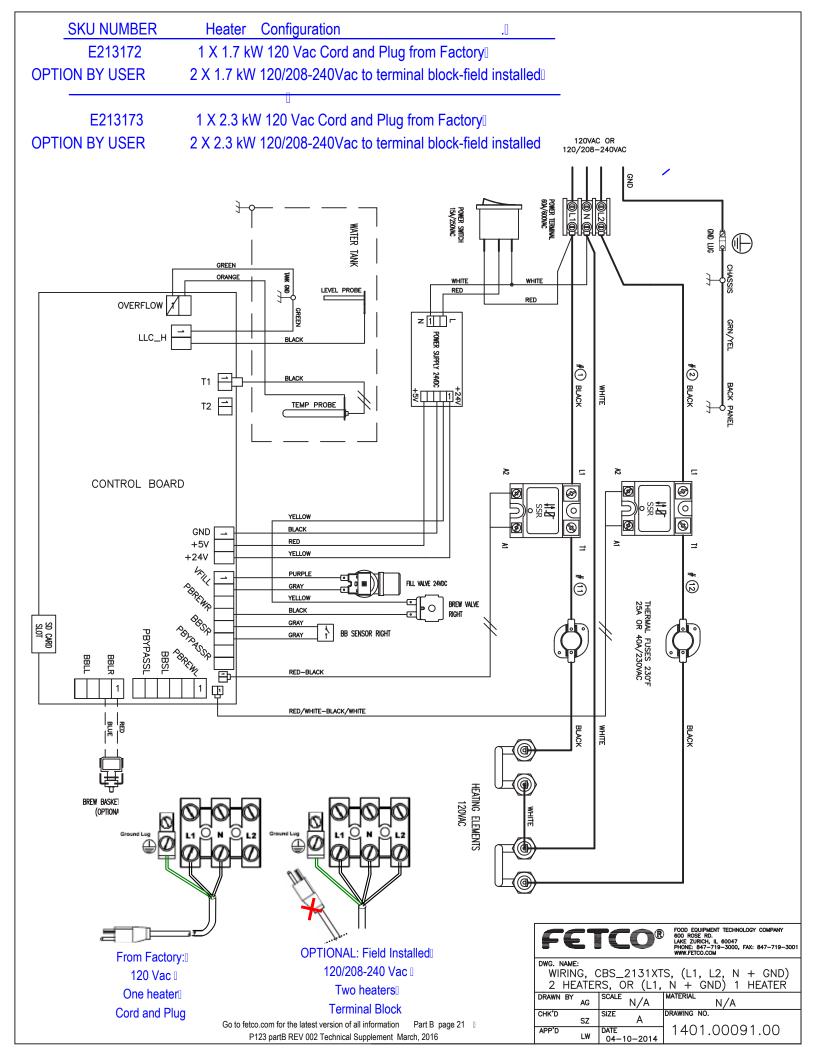


INSTRUCTIONS TO SET BREWER Change brewer for brew size: CBS-2131 3L; CBS-2131; 1G CBS-2132 3L; CBS-2132 1G

Brewer is factory set for three liter brew capacity. User can configure the brewer for 1 gallon brew To change brewer configuration: Access the General Service Menu

There are five service menus:

PROGRAM, GENERAL, INPUTS, OUTPUTS, and OTHER (select OTHER in service menu to change to 1 gallon).

- →Enter Service Menu by accessing the power switch on back of the panel
- Service menu is accessed when "PROGRAM" screen (2) displays
- 1)-Switch power "OFF" with power switch located on rear of brewer
- 2)-After at least ten seconds: Turn power switch "ON"
- 3)-Quickly touch and hold the XTS screen to enter the programming screens as shown below (screen1)
- 4)-When entering The SERVICE MENU: the first screen in the group is "PROGRAM" (screen 2)
- 5)-Use right and left arrow icons to navigate through the five main SERVICE (2-6 below) menu groups.
- 6)-Proceed to "OTHER" screen (screen 6). Use **down arrow icon**, as illustrated, to access second level (6&7).

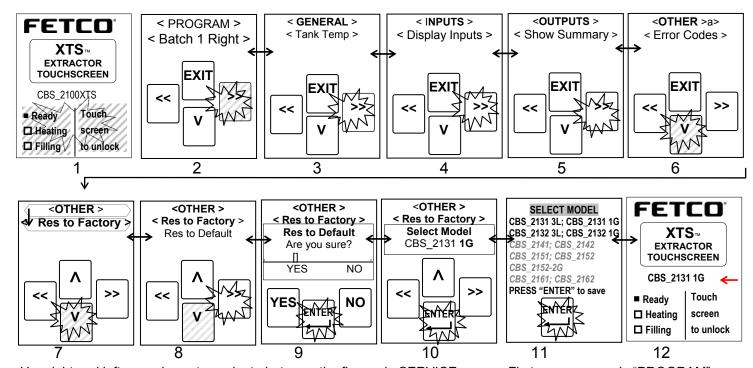

Use right and left arrow icons to navigate between the five main SERVICE menus. First menu screen Is "PROGRAM" Highlight programming path and use arrows to locate "Select Model" programming screen

- 7)-Use right and left arrow icons to navigate to Restore to Factory defaults (Res to Factory) (screen 7).
- 8)-Use down arrow to set brewer to access factory default settings for the brewer configuration desired (screen 8)
- 9)-Enter "YES" to restore factory defaults. This will configure the brewer to the correct brew capacity (screen 9)
- 10) Right and left arrow icons to navigate CBS_2131 3Liter; CBS_2131 1Gallon CBS_2132 3Liter; CBS_2132 1Gallon Highlight desired brewer type and use the arrow icons to navigate service menu screens.
- 11)-Press "ENTER" and navigate sing UP arrows to home screen to brew (screens 10&11)
- !PLEASE NOTE! **ONLY SELECT:** CBS_2131 3Liter; CBS_2131 1Gallon CBS_2132 3Liter; CBS_2132 1Gallon . Do not select any other configuration. Verify the configuration on the home screen (screen 12-marked by arrow) 12)-Home screen

User must setup the brewer before installing. First install legs and adjust for 1 gallon

1)Select leg height and attach for either 3 Liter / 1 Gallon dispensing



1" legs -Attach this length for 3 Liter airpot configuration (Default).



2-1/2" legs -Attach this length for 1 Gallon dispenser use.

NOTE: See reverse side to "select brewer configuration to set brewer for 3 Liter or 1 Gallon configuration

